



ASUS Q302L Battery Replacement

Replacing the internal battery if it no longer can hold a charge.

Written By: khalifa



INTRODUCTION


This guide will take you through the steps of replacing your faulty batter. Please note that there is a Prerequisite Guide to follow before starting this guide.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — Back Case

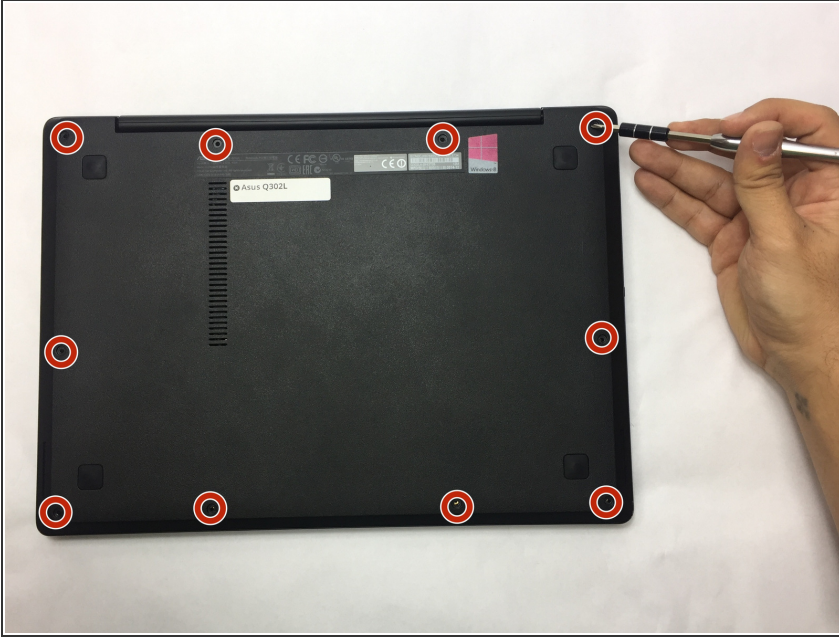

- Use a Philips head screw driver to remove all the screws around the back of the laptop

⚠ Make sure the laptop is disconnected from a power supply and is **TURNED OFF**

Step 2

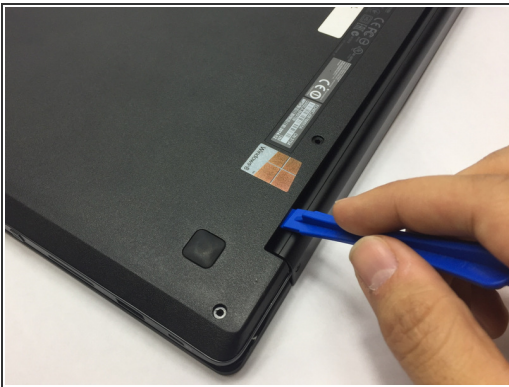

- Wedge a plastic prying tool on the left or right on the back side of the laptop
- Push down on the prying tool till you hear the clips pop out of place and the cover starts to open
- Repeat the second step along the entire back of the laptop till all the clips pop out of place

Step 3




- Once the cover is free from all the clips, you can now safely remove the cover completely off the laptop

Step 4 — Battery




- Use a Philips head screw driver and remove the marked screws

Step 5

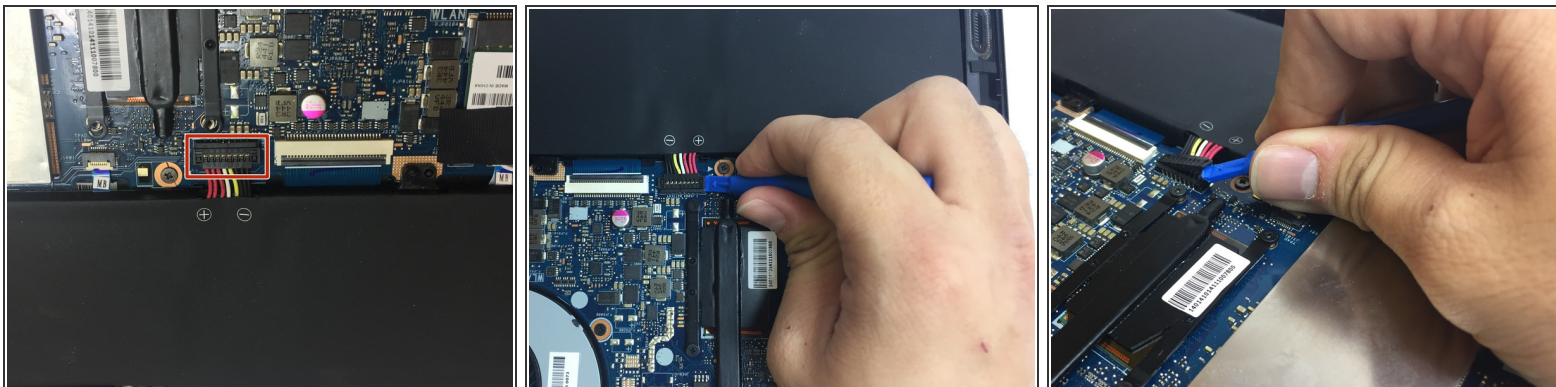

- Locate the battery power connector to the motherboard
- Gently wedge a plastic prying tool underneath either side of the connector
- Carefully pull up on the connector with the prying tool till it is removed

Step 6

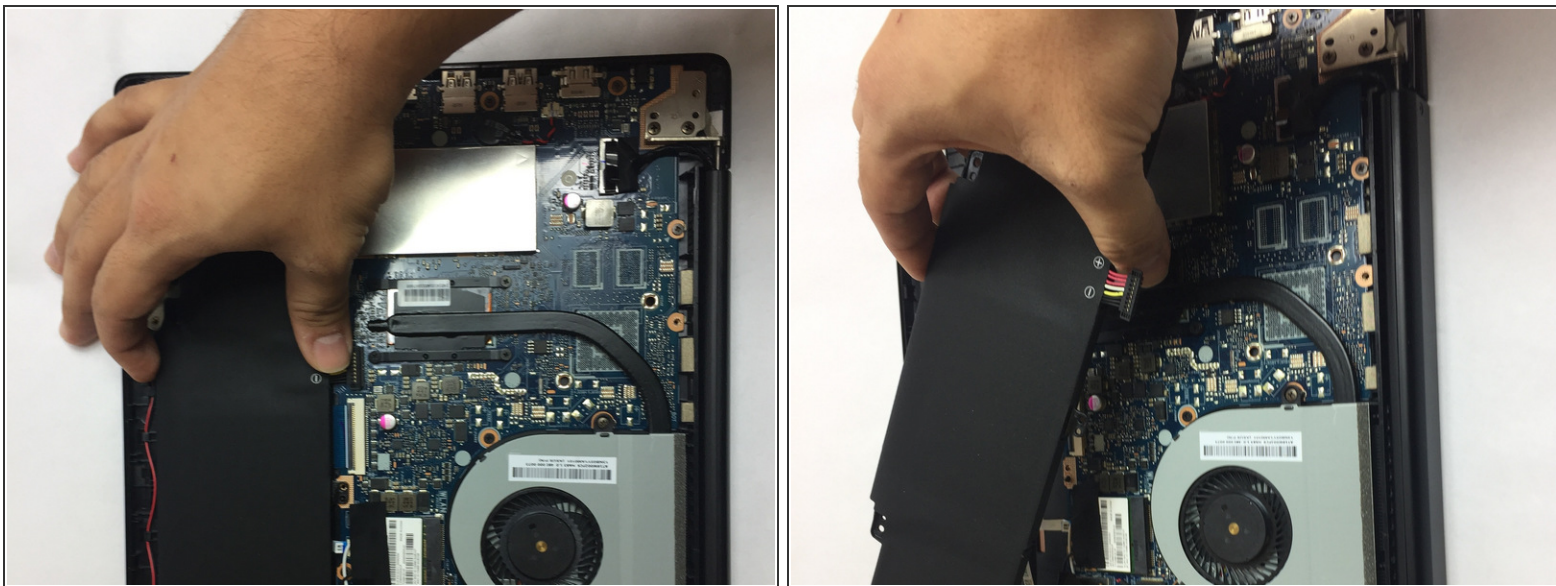

- Once the screws and connector are removed, simply pull out the battery from its place

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-24 11:40:20 AM.